

Better **solutions.**
Better **care.**

Soiled Linen Case Carts

Our range of Soiled Linen Case Carts are sturdy, long-lasting and easy to manoeuvre, providing the optimum solution for the collection and transportation of soiled linen from hospital wards.

Developed and adapted through years of experience working in accordance with **NHS infection prevention standards.**

- No sharp edges that could damage goods or harm users
- No interstices or overlapped sheets in which HAI's can develop
- Ribbed walls increase strength whilst not increasing weight
- Fully enclosed to prevent contaminated air escaping
- Designed to allow for automated washing, no water retention.

Features:




Strong **non-twisting bottom frame** in epoxy coated steel which is the structural element of the carts that gives stiffness to all the assembled components and supports the mechanical stress exerted when towing multiple carts.




Lower bumper in light alloy and rubber profile are moulded for impact absorbing



Hinge mechanism with stop in open position

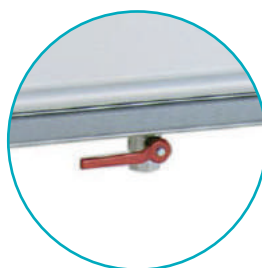

Drain tap to enable the safe and hygienic disposal of clinical waste

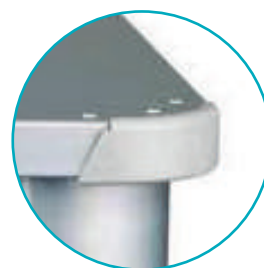





Folded edges and **polyamide corners** for users' safety



Better **solutions.**
Better **care.**

Soiled Linen Case Carts

Options:

	SKU	Internal Dimension (mm)	External Dimension (mm)	Caster Dia. (mm)	Total Weight. (mm)	Storage Capacity (ltrs)
	CR1560001F	1000W x 600D x 610H	1045W x 650D x 800H	125	26	366
	CR1550M	1000W x 600D x 1165H	1100W x 650D x 1425H	160	47.6	699
	CR1550L	1000W x 600D x 1165H	1100W x 650D x 1425H	160	37.5	714
	CR1600	1300W x 700D x 1085H	1400W x 760D x 1340H	160	59.2	987

Available accessories:



Hinged Tow Bar with spring and peg



Central Brake System



Extra push handle



Upper bumper for an optimal protection of contents during transport by lorry or towing



ISO9001:2015



CO₂e Neutral Operations

+44 (0)1472 266 190
sales@agilemedical.co.uk
agilemedical.co.uk

Agile
M E D I C A L

Better **solutions.**
Better **care.**

Clean Linen Case Carts

Our range of Clean Linen Case Carts are strong, durable and easy to manoeuvre, providing the optimum solution for the transportation of clean linen around the hospital.

Developed and adapted through years of experience working in accordance with **NHS infection prevention standards.**

- No sharp edges, preventing damage to users or goods
- No interstices or overlapped sheets to prevent build up of HAI's
- Designed to allow for automated washing, no water retention.

Features:



Strong **non-twisting bottom frame** in epoxy coated steel which is the structural element of the carts that gives stiffness to all the assembled components and supports the mechanical stress exerted when towing multiple carts.



Lower bumper in light alloy and rubber profile are moulded for impact absorbing.



Upper bumper for an optimal protection of contents during transport by lorry or towing.
Door built with 2,5mm bent sheet and welded reinforcements on top and bottom.



Ergonomic **closing handle** with rounded edges.







Ergonomic **push-handle** with double grip and rounded edges.



Better **solutions.**
Better **care.**

Clean Linen Case Carts

Options:

	SKU	Internal Dimension (mm)	External Dimension (mm)	Caster Dia. (mm)	Total Weight. (mm)	Compartments	Storage Capacity (ltrs)
	CR1560001F	1130W x 550D x 920H	1230W x 630D x 1245H	160	61.5	2	572
	CR1550232F	1130W x 550D x 1170H	1230W x 630D x 1495H	200	66	3	731
	CR1550514F	1130W x 550D x 1420H	1230W x 630D x 1785H	200	76.5	3	883
	CR1600003F	1300W x 630D x 1420H	1400W x 710D x 1740H	200	80	3	1162

Available accessories:



Hinged Tow Bar with spring and peg



Lock with two keys



Tamper Evident Seal



Central Brake System



A4 Document Holder



ISO9001:2015



NHS approved supplier



CO₂e Neutral Operations

+44 (0)1472 266 190
sales@agilemedical.co.uk
agilemedical.co.uk

