

# Clean Linen Case Carts

Easy transportation for lasting hygiene.

Our range of Clean Linen Case Carts are strong, durable and easy to manoeuvre, providing the optimum solution for the transportation of clean linen around the hospital. Developed and adapted through years of experience working in accordance with NHS infection prevention standards.

## Options:

Small - 572ltr



Medium - 731ltr



Large - 883ltr



Extra Large - 1162ltr



Strong **non-twisting bottom frame** in epoxy coated steel which is the structural element of the carts that gives stiffness to all the assembled components and supports the mechanical stress exerted when towing multiple carts.

# Clean Linen Case Carts

## Features:

- No sharp edges, to protect users and goods
- No interstices or overlapped sheets to prevent build-up of HAIs
- Designed to allow for automated washing without water retention
- Strong non-twisting bottom frame in epoxy coated steel.

## Dimensions:

### Small Cart:

Width (mm) 1230, Depth (mm) 630, Height (mm) 1245

### Medium Cart:

Width (mm) 1230, Depth (mm) 630, Height (mm) 1495

### Large Cart:


Width (mm) 1230, Depth (mm) 630, Height (mm) 1785

### Extra Large Cart:

Width (mm) 1400, Depth (mm) 710, Height (mm) 1740



**Lower bumper** in light alloy and rubber profile are moulded to absorb impact.

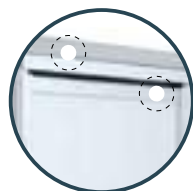

**Upper bumper** for an optimal protection of contents during transport by lorry or towing. **Door** built with upper and lower reinforcements.



**Ergonomic closing handle** with rounded edges.



**Ergonomic push-handle** with double grip and rounded edges.

## Ordering:

Product	Code
Small Clean Linen Case Cart - 366ltr Capacity	<b>CR1560001F</b>
Medium Clean Linen Case Cart - 699ltr Capacity	<b>CR1550232F</b>
Large Clean Linen Case Cart - 714ltr Capacity	<b>CR1550514F</b>
Extra Large Clean Linen Case Cart - 987ltr Capacity	<b>CR1600003F</b>
Accessories	
Hinged Tow Bar with spring and peg	<b>XTR1550</b>
Lock with two keys	<b>XSER1550</b>
Tamper evident seal	<b>XTS1550</b>
Central brake system	<b>XFC1550</b>
A4 document holder	<b>XPCA4</b>

## Available Accessories:



Hinged tow bar with spring and peg



Lock with two keys



Tamper evident seal



Central brake system



A4 document holder